

Maintenance Recommended under Severe Driving Conditions

If the vehicle is usually used under the conditions corresponding to any severe condition code given below, It is recommended that applicable maintenance operation be performed at the particular interval as shown in the following table.

Severe condition code:

- A: Repeated short trips
- B: Driving on rough and/or muddy roads
- C: Driving on dusty roads
- D: Driving in extremely cold weather and/or salted roads
- E: Repeated short trips in extremely cold weather
- F: Leaded fuel use
- G: Repeated high speed drive or high engine revolutions
- H: Trailer towing (if admitted)

NOTE:

This table shows the typical maintenance schedule.

The actual maintenance schedule, however, varies depending on vehicle specifications and such typical maintenance schedule may not be applicable to some models.

Therefore, for the maintenance schedule specifically applicable to the vehicle being serviced, follow instructions in the "Maintenance Recommended under Severe Driving Conditions" under "INSPECTION AND MAINTENANCE" section of the Owner's Manual.

Severe condition code	Maintenance		Maintenance operation	Maintenance interval
- B C D - - - -	Engine accessory drive belt		I: ()	Every 15,000 km (9,000 miles) or 12 months.
			R: ()	Every 45,000 km (27,000 miles) or 36 months.
A - C D E F - H	Engine oil and oil filter		R: ()	Every 7,500 km (4,500 miles) or 6 months.
- - C - - - - -	Air cleaner filter *1		I: ()	Every 2,500 km (1,500 miles).
			R: ()	Every 30,000 km (18,000 miles) or 24 months.
A B C - E F - H	Spark plugs	Iridium spark plug	R: ()	Every 30,000 km (18,000 miles) or 24 months.
		Nickel spark plug	R: ()	Every 10,000 km (6,000 miles) or 8 months.
- - - - - G -	Continuously variable transaxle (CVT) fluid deterioration check		I: ()	Every 30,000 km (18,000 miles) or 24 months.
- B C D - - - H	Wheel bearings		I: ()	Every 15,000 km (9,000 miles) or 12 months.
- B - D E - - H	Drive shaft (axle) boots / Propeller shaft (4WD model)		I: ( / )	Every 15,000 km (9,000 miles) or 12 months.
- B - - E - - H	Manual transaxle oil (Genuine "SUZUKI GEAR OIL 75W-80")		I: ()	Every 15,000 km (9,000 miles) or 12 months.
			R: ()	Every 75,000 km (45,000 miles) or 60 months.

- B - - E - - H	Manual transaxle oil (Other than "SUZUKI GEAR OIL 75W-80") Transfer oil (4WD model) Differential oil (4WD model)	R: ( /  / )	First time only: 15,000 km (9,000 miles) or 12 months.
			Second time and after: Every 30,000 km (18,000 miles) or 24 months reckoning from 0 km (0 mile) or 0 month.
- - C D - - - -	HVAC air filter (if equipped) *2	I: ()	Every 15,000 km (9,000 miles) or 12 months.
		R: ()	Every 45,000 km (27,000 miles) or 36 months.

NOTE:

- "I": Inspect and correct or replace if necessary.
- "R": Replace or change.
- *1: Inspect or replace more frequently if the vehicle is used under dusty conditions.
- *2: Clean more frequently if the air flow from the air conditioning decreases.